


Spare parts list

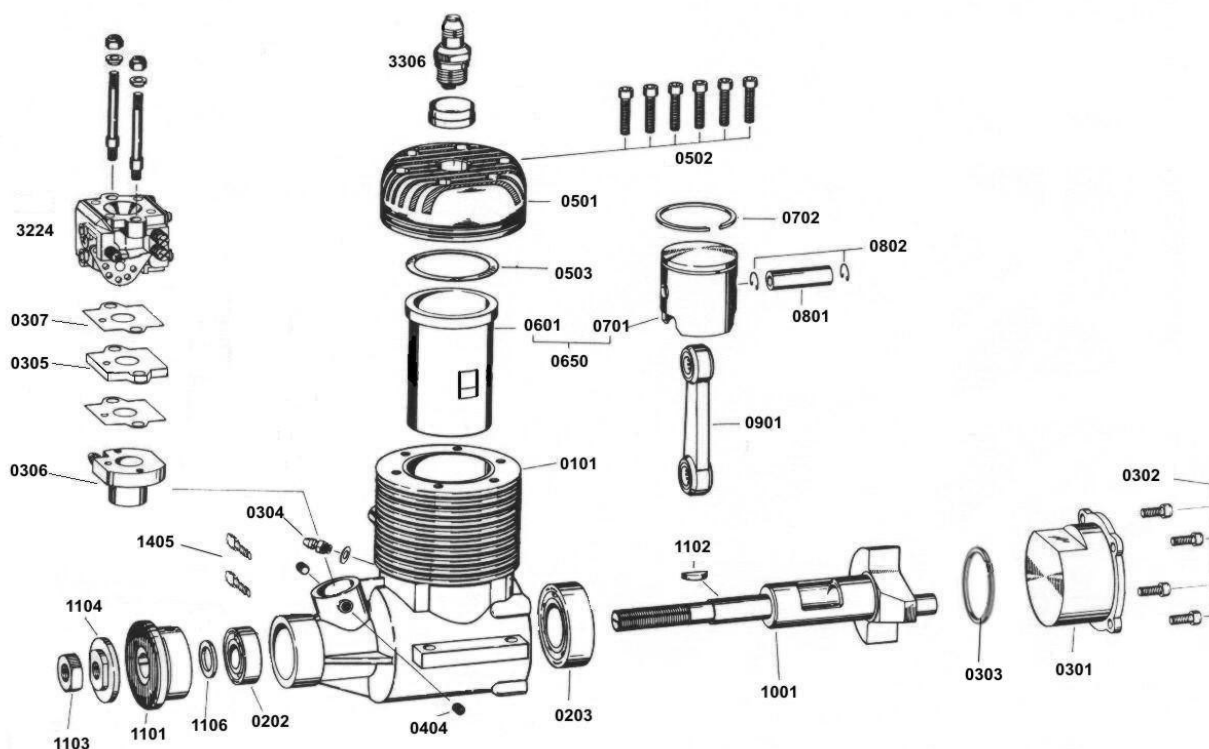

No:	Description:	No:	Description:
0101	Crankcase	1001	Crankshaft
0304	Pressure nipple	1101	Drive washer
0202	Front bearing	1102	Drive washer key
0203	Rear bearing	1103	Propeller nut
0301	Rear cover	1104	Propeller washer
0302	Rear cover screws - set	1106	Drive washer shim
0303	Rear cover „O“ - ring	3224	Carburetor
0501	Cylinder head	0306	Carburetor flange
0502	Cylinder head screws - set	0305	Isolation underlay
0503	Cylinder head gasket	0307	Carburetor flange gasket
0650	Cylinder-piston assembly	1307	Carburetor screws
0701	Piston	3309	Spark plug
0702	Piston ring	3314L	Electronic ignition unit
0801	Piston pin	1405	Ignition sensor fixing screws
0802	Piston pin circlips		